



POLICE DEPARTMENT

LAKE HAVASU CITY

2360 McCULLOCH BOULEVARD NORTH
LAKE HAVASU CITY, ARIZONA 86403-5947

To Whom It May Concern:


I hereby attest that Jonathan Noble is a Certified Intoxilyzer Quality Assurance Specialist for the Department of Public Safety.

I certify that the attached documentation of Standard Quality Assurance Procedures and/or Standard Calibration Check Procedure are full, true and correct copy of the original.


Signature

STATE OF ARIZONA)
) ss
COUNTY OF MOHAVE)


Subscribed and sworn to before me this 27 day of January.

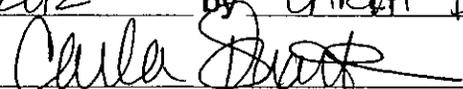2012 by CARLA DUARTE


NOTARY PUBLIC

1-27-12
DATE

Commission expires:

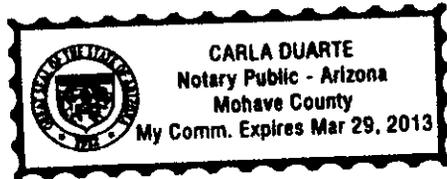

Area Code 928

Administration 855-4884
Business Office 855-1171
Investigations 855-5775
Patrol 855-0515

Fax #'s
Administration 680-5430
Business Office 680-5431
Investigations/Patrol 680-5432

Emergency 9-1-1
Non-Emergency Dispatch/ 855-4111
 TDD 855-4114
Havasu Silent Witness 854-TIPS

E-mail: police@lhcaz.gov

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J.L. Noble AGENCY Arizona DPS

DATE 1/27/2012 TIME 11:19:56

INTOXILYZER SERIAL # 80-001029 LOCATION Lake Havasu City P.D. Jail

✓ 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 2100 AC.
OR

Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$

2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
4. Air blank completed.
5. Calibration check completed. Test results 0. _____ AC.
6. Air blank completed.
7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature]

DPS Form Exh G-2 (Rev 05-01)

standard change lot # 13711100A1

INTOXILYZER 8000

Location: JHCPD MATN JAIL

Serial Number: 80-001029

Core Version: 8105.48

01/27/2012

11:19:56

Standard Lot#: 13711100A1

Last Changed By: J. NOBLE #5190

QAS: J. NOBLE #5190

AZ DPS

Operator: J. NOBLE #5190

AZ DPS

Test	g/210L	Time
Air Blank	0.000	11:20:30
0.100 Cal Check	0.099	11:20:51
Air Blank	0.000	11:21:20

Preventative Maintenance
Performed -- Timer Reset

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST J.L. Noble AGENCY Arizona DPS

DATE 11/27/12 TIME 11:13:18

INTOXILYZER SERIAL # 80-001029 LOCATION Lake Havasu City P.D. Jail

- ✓ 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0.100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- ✓ 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- ✓ 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- ✓ 4. Air blank completed.
- ✓ 5. Calibration check completed. Test results 0. 100 AC.
- ✓ 6. Air blank completed.
- ✓ 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Jonathan J. Noble

INTOXILYZER 8000

Location: LHCPD MAIN JAIL

Serial Number: 80-001029

Core Version: 8105.48

01/27/2012

11:13:18

Standard Lot#: 01011100A1

Last Changed By: J. NOBLE #5190

QAS: J. NOBLE #5190

AZ DPS

Operator: J. NOBLE #5190

AZ DPS

Test g/210L Time

Air Blank 0.000 11:13:57
0.100 Cal Check 0.100 11:14:18
Air Blank 0.000 11:14:47

Preventative Maintenance
Performed -- Timer Reset