



POLICE DEPARTMENT  
**LAKE HAVASU CITY**  
2360 McCULLOCH BOULEVARD NORTH  
LAKE HAVASU CITY, ARIZONA 86403-5947

To Whom It May Concern:

I hereby attest that Earl Wilson is a Certified Intoxilyzer Quality Assurance Specialist for the Lake Havasu City Police Department.

I certify that the attached documentation of Standard Quality Assurance Procedures and/or Standard Calibration Check Procedure are full, true and correct copy of the original.

Earl Wilson  
Signature

STATE OF ARIZONA     )  
  ) ss  
COUNTY OF MOHAVE    )


Subscribed and sworn to before me this 8 day of MAY.

2012 by CARLA DUARTE

Carla Duarte  
NOTARY PUBLIC

5-8-12  
DATE

Commission expires:

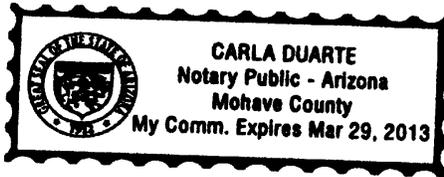

Area Code 928

Administration ..... 855-4884  
Business Office ..... 855-1171  
Investigations ..... 855-5775  
Patrol ..... 855-0515

Fax #'s  
Administration ..... 680-5430  
Business Office ..... 680-5431  
Investigations/Patrol ..... 680-5432

Emergency ..... 9-1-1  
Non-Emergency Dispatch/ ..... 855-4111  
  TDD 855-4114  
Havasus Silent Witness ..... 854-TIPS

E-mail: police@lhcaz.gov



BRIOWATER CHANNEL  
SIGN #8

7 Eastgate Dr. • P.O. Box 790 • Jacksonville, IL 62651-0790  
217-245-2183 • Fax: 217-243-7634 • www.ilmoproducts.com


## Certificate of Analysis

**Certificate ID:** 1168  
**Part #:** BAC105L100T  
**Cylinder Size:** 105L  
**Lot Number:** 35710100A1  
**Expiration:** 1/1/2013

### 0.100 BAC (For use with breath alcohol testing instruments)


**Contents:** 105 Liters @ 1025 psig 70°F (21°C)

Component:	Concentration:	Accuracy:	Method:
Ethanol	260.5 ppm	+/- 0.002 or 2%	NDIR
Nitrogen	Balance	BAC whichever is greater	

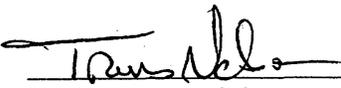  
Specialty Gas Lab Manager

12-22-2010  
Date

Distributed by: CMI Inc.  
316 East Ninth Street  
Owensboro, KY 42303  
Phone 866-835-0690  
[www.alcoholtest.com](http://www.alcoholtest.com)

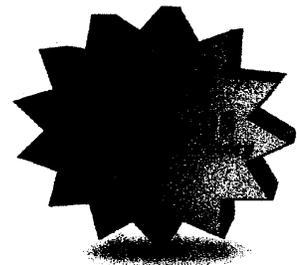

ISO/IEC 17025:2005 Accredited Laboratory

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000  
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST EARL WILSON AGENCY LAKE HAVASU CITY POLICE DEPT.

DATE 03/23/12 TIME 14:19:33

INTOXILYZER SERIAL # 80-003356 LOCATION BRIDGEWATER CHANNEL SIGN #8

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0.100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach  $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0.097 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Earl Wilson 226

INTOXILYZER 8000

Location: STORAGE

Serial Number: 80-003355

Core Version: 8105.48

03/23/2012

14:18:47

-----  
Standard Lot#: 35710100A1

Last Changed By: E. WILSON #226  
-----

QAS: E. WILSON #226

LAKE HAVASU CITY PD  
-----

Operator: E. WILSON #226

LAKE HAVASU CITY PD  
-----

Test	g/210L	Time
Air Blank	0.000	14:19:33
0.100 Cal Check	0.097	14:19:54
Air Blank	0.000	14:20:23

Preventative Maintenance  
Performed -- Timer Reset

*EW  
226*

EXHIBIT G-4  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST EARL WILSON AGENCY LAKE HAVASU CITY POLICE DEPT.

DATE 03/23/12 TIME 14:23:25

INTOXILYZER SERIAL # 80-003355 LOCATION BRIDGEWATER CHANNEL 51621#8

1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

1. Clock time check.  
 2. Date check.

OPERATIONAL TESTS

1. Alcohol-free subject test result 0. 000 AC.  
 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed  
 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.  
 4. Standard Calibration Check standard 0. 100 AC. Result 0. 097 AC.

Instrument is operating properly and accurately. YES  NO

COMMENTS

---

---

---

---

SIGNATURE EARL WILSON 226

INTOXILYZER 8000  
Location: STORAGE  
Serial Number: 80-003355  
Core Version: 8105.48  
03/23/2012

14:23:35

---

Standard Lot#: 35710100A1  
Last Changed By: E. WILSON #226

---

QAS: E. WILSON #226  
LAKE HAVASU CITY PD

---

Operator: E. WILSON #226  
LAKE HAVASU CITY PD

---

Subject: SQAP,TEST  
DOB: 01/01/2010  
Sex: M Weight: 123

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	14:25:02
Diagnostic Test	Pass	14:25:37
Air Blank	0.000	14:26:05
0.100 Cal Check	0.097	14:26:26
Air Blank	0.000	14:26:55
Subject Test	0.000	14:27:12
Air Blank	ABT*	14:27:23
Air Blank	IPS**	14:27:31

\*Sequence Aborted

\*\*Improper Sample

**Not a Successfully Completed Test Sequence**

*en 2/24*

INTOXILYZER 8000  
Location: STORAGE  
Serial Number: 80-003355  
Core Version: 8105.48  
03/23/2012

14:29:00

---

Standard Lot#: 35710100A1  
Last Changed By: E. WILSON #226

---

QAS: E. WILSON #226  
LAKE HAVASU CITY PD

---

Operator: E. WILSON #226  
LAKE HAVASU CITY PD

---

Subject: SQAP,TEST  
DOB: 01/01/2010  
Sex: M Weight: 123

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	14:29:58
Diagnostic Test	Pass	14:30:33
Air Blank	0.000	14:31:00
0.100 Cal Check	0.097	14:31:21
Air Blank	0.000	14:31:51
Subject Test	0.365*	14:34:58
Air Blank	0.000	14:35:31
Air Blank	0.000	14:35:58
Subject Test	XXX**	14:36:14
Air Blank	RFI***	14:36:21

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

\*\*\*RFI Detect

**Not a Successfully Completed Test Sequence**

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000  
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST EARL WILSON AGENCY LAKE HAVASU CITY POLICE DEPT

DATE 03/23/12 TIME 14:38:21

INTOXILYZER SERIAL # 80-003355 LOCATION BRIOWATER CHANNEL SIGN #8

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution \_\_\_\_\_ AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 097 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Earl Wilson 226

INTOXILYZER 8000  
Location: STORAGE  
Serial Number: 80-003355  
Core Version: 8105.48  
03/23/2012 14:37:49

-----  
Standard Lot#: 35710100A1  
Last Changed By: E. WILSON #226  
-----

QAS: E. WILSON #226  
LAKE HAVASU CITY PD  
-----

Operator: E. WILSON #226  
LAKE HAVASU CITY PD  
-----

Test	g/210L	Time
Air Blank	0.000	14:38:21
0.100 Cal Check	0.097	14:38:41
Air Blank	0.000	14:39:11

Preventative Maintenance  
Performed -- Timer Reset

*EW*  
*226*